

- allow for sill drainage.

centor

4. Refer to Nanawall instructions for door installation and weather proofing.

