

SPECIFICATIONS AND DETAILS SUBJECT TO CHANGE WITHOUT NOTICE ©2025 NanaWall Systems, Inc. www.nanawall.com

8

8


D

С

В

А

6

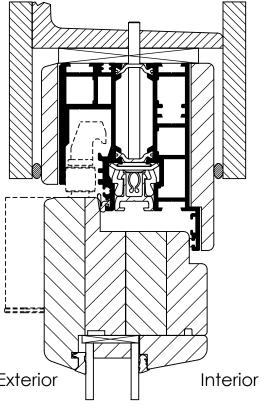

Exterior Interior $\frac{10}{17}$ "|100|


> Low Profile Saddle Sill - Option 2 (If no water rating is needed.)

A Drill holes all the way to the back as shown at a slight angle upwards.

Before creating the 3/8" (10mm) drainage hole, we recommend using a smaller drill bit to create a pilot hole.

B Drill holes as shown.

C Drill 2 holes as shown at both ends of the channel.

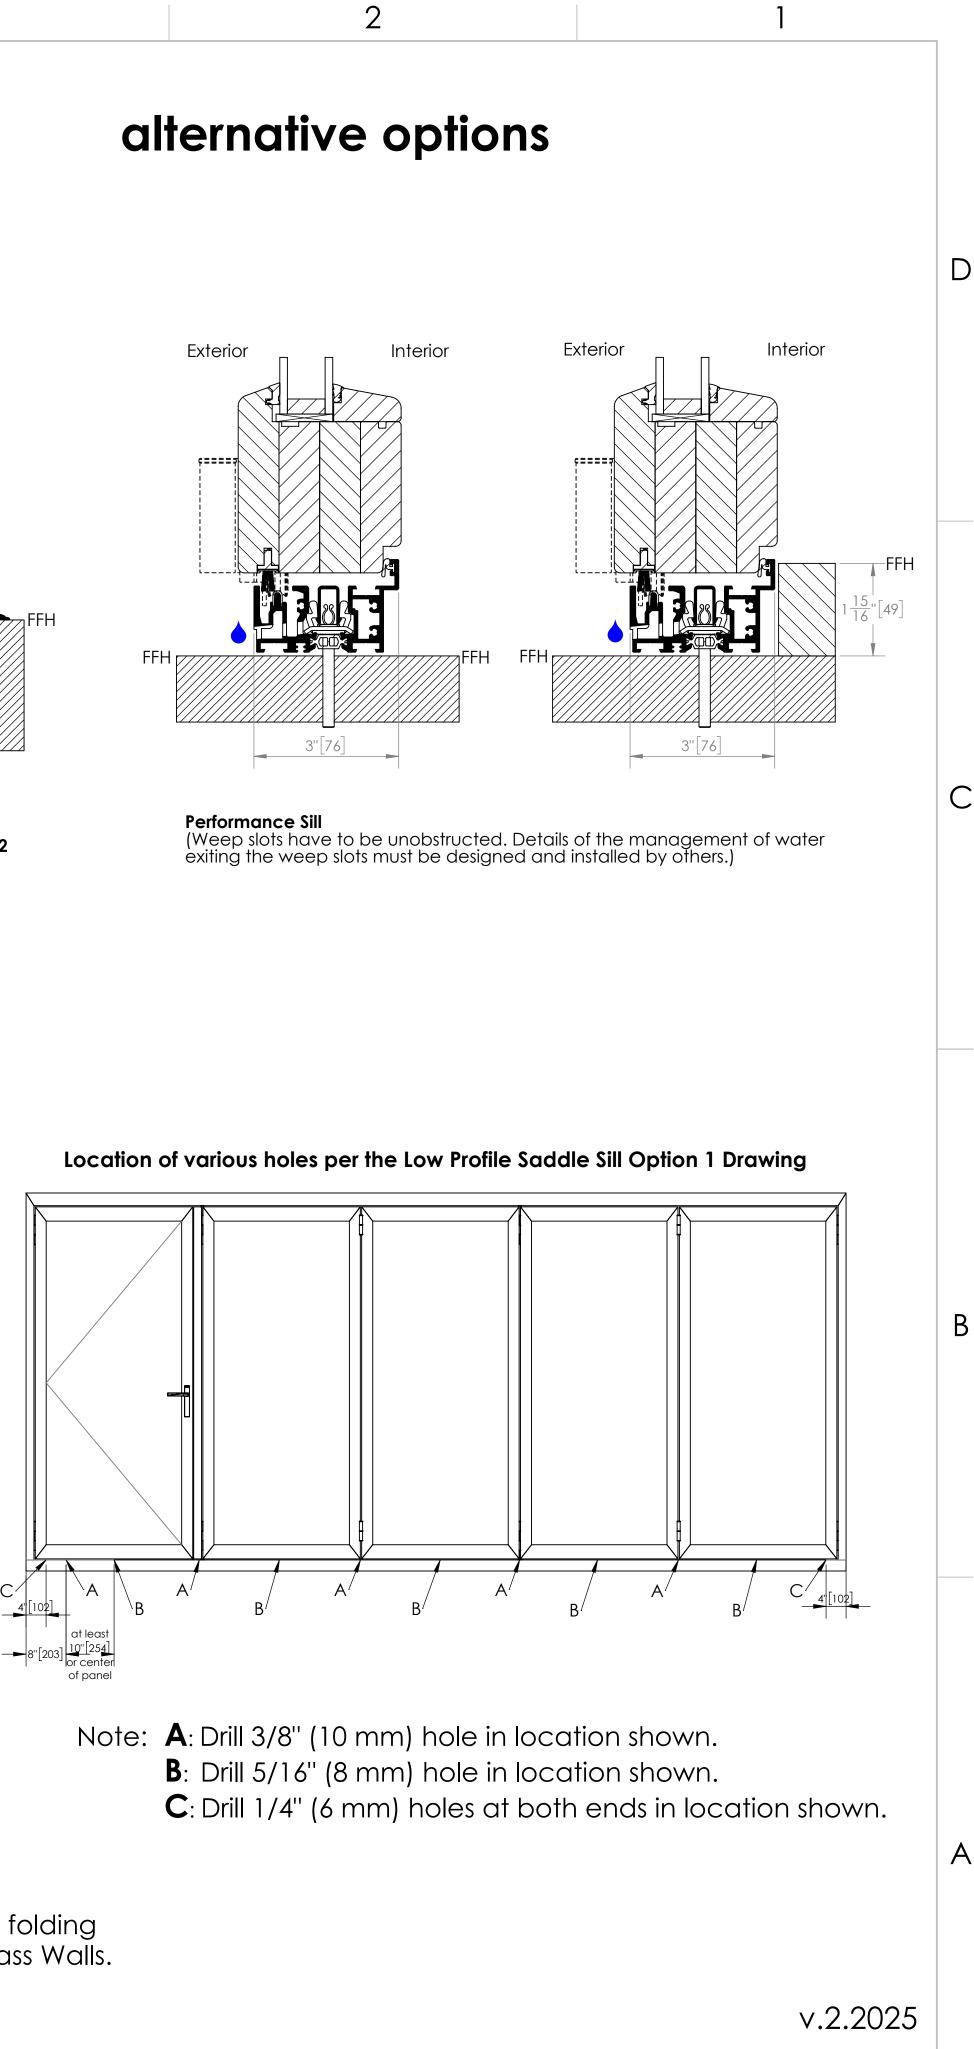

2

D

All appropriate water proofing and flashing details to be designed and installed by others. These should include proper sealing of all fastener holes and each end of the sill. For more information about preparing the rough opening, installation and operation of this folding system, please look at the installation and Owner's Manual for the Generation 4 Folding Glass Walls.

5

3